

Furrow Cruiser Complete, Cruiser 2 & Cruiser Xtreme Wheel Installation Guide



- **JD 7000/7100 and Kinze Pre-1993** planters with roll pin water pump style bearings require a stud adapter kit and new bolt through style hubs and bearings.
- For **JD 7200/7300** planters you must utilize the stock hubs and bearings and use our Furrow Cruiser Inserts only
- **JD 7200/7300** planters can only fit one spacer washer in between the wheel and tailpiece so spacing will be approx. 7/8" - 1 1/8" between the wheels



Remove stock closing wheels from the planter.



Use existing spacers and washers provided to space the wheels approximately 1 1/4 inches apart at the closest point tip to tip of the spikes at the very bottom.

Contour planting setup on back page.



Install Furrow Cruisers in the back holes of the tailpiece straight across from each other. This set up results in the best firming action and cleaning out in wet planting.

Furrow Cruiser Complete, Cruiser 2 & Cruiser Xtreme Wheel Installation Guide



In high contour planting and turning on side hulls, install the Furrow Cruisers in the front holes and widen them to approximately 1 1/2 inches apart. This will help in keeping the spike out of the furrow and on the sidewall



For optimal performance, Furrow Cruisers should run in pairs.

Spacing wheels at 1 1/4 " is an approximate measurement. Be sure to have an equal number of washers on each side to get as close to the measurement as possible. Ga between wheels may need to be adjusted according to planting condition. Soil conditions vary so you will need to check for seed soil contact as conditions change.

Down pressure settings are run very similar to stick rubber tire closing wheels. Conventional tillage: 1st-2nd notch. No till 3rd-4th notch. This can vary as conditions change, Dig around the seed to make sure that you can not find any of the "V" from the openers. If you see sidewall, you need another notch of down pressure, Xtreme Cruisers are typically run floating or in the 1st notch.

For additional customer support check out www.copperheadag.com or call 605-528-3333