

INSTALLATION INSTRUCTIONS

SR8301678

Side Kick Seat

Tractors: 2140, 2350, 2355, 2550, 2555, 2750, 2755, 2855N, 2940, 2950, 2955, 3055, 3140, 3150, 3155, 3255, 4030, 4040, 4050, 4055, 4230, 4240, 4250, 4255, 4320, 4430, 4440, 4450, 4455, 4555, 4560, 4630, 4640, 4650, 4755, 4760, 4840, 4850, 4955, 4960



Removing Personal-Posture Arm Rest:

1. Use a 1/4" Allen wrench to remove two allen bolts (A) that attach arm rest to seat bracket, then remove arm rest.
2. Use a 9/16" wrench to remove two machine bolts from seat bracket (B)



Installing Side Kick Seat:

1. Complete installation by inserting provided bolts (3/8"x16x2", 3/8"x16x3") (C) through Side Kick seat into seat bracket holes and tighten. (Arm rest holes will not be used)

