LANGD200 **Installation Instructions**

Flex Head Grain Divider Point for 900 & 600 Series Flex heads with Poly Dividers.

LANKOTA

270 West Park Avenue Huron, SD 57350 877-860-7669


Page | 1 1/20/2014 www.lankota.com | Lankota Inc.

John Deere and JD are registered trademarks of Deere & Company. Lankota is a registered trademark of Lankota Group.

Numerical Parts List

Part Numbers	Description	Quantity
LANGD200	Grain Dividers Set of 2	1

Pictorial Parts List

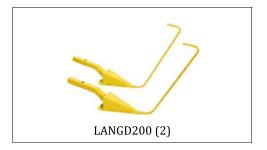

Page | 2 1/20/2014 www.lankota.com | Lankota Inc.

John Deere and JD are registered trademarks of Deere & Company. Lankota is a registered trademark of Lankota Group.

Preparation

1. Lift head and place feeder house safety lock in the locked position

1. Procedure

Refer to Figure 1.1 & 1.2

- 1.1 Remove the two metric screws from the bottom of the factory installed poly divider point. Slide divider out of the tube.
- 1.2 Slide (LANGD200-1) into the tube and line up the larger of the holes and reinstall the screw. The small screw will not be reused in the application.
- 1.3 Repeat on the other side.

For further technical questions contact Lankota at 866.526.5682.



Figure 1.1

Remove Screws Here



Figure 1.2

Page | 3 1/20/2014 www.lankota.com | Lankota Inc.

John Deere and JD are registered trademarks of Deere & Company.

Lankota is a registered trademark of Lankota Group.