


# POLY SNOOT SAVERS INSTRUCTIONS

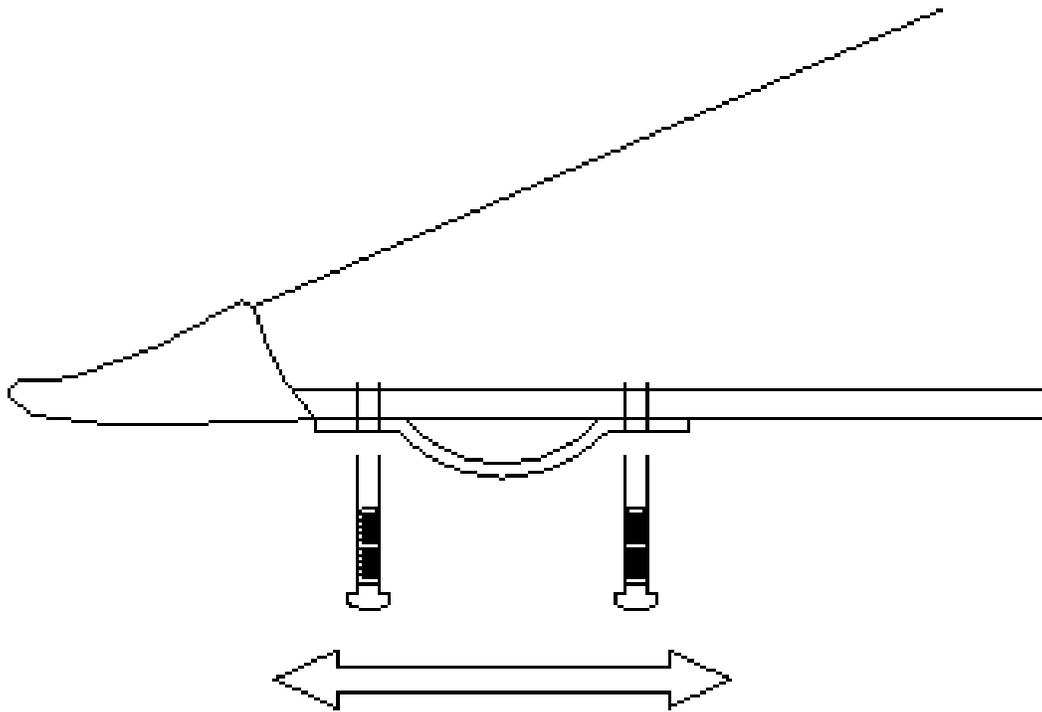

ADJUST FOR BUBBLE HEIGHT

## Mounting Procedure:

1. Bend Snout Saver to desired height.
2. Attach Snout Saver to bottom of divider directly behind point.
3. Use enclosed zip screws to fasten Snout Saver to divider. (see above diagram)
4. BE CAREFUL NOT TO OVERTIGHTEN SCREW! ⚠



**MAY WES**  
*Original Poly People*  
A DIVISION OF PRIDE SOLUTIONS


120 Eastgate Drive SE  
PO Box 7  
Hutchinson, MN 55350

1-800-788-6483  
1-320-587-2322  
1-320-587-6112 (Fax)


[WWW.MAYWES.COM](http://WWW.MAYWES.COM)

# POLY SNOOT SAVERS INSTRUCTIONS

1. Tuck the narrow front end of the Snout Saver underneath the divider cap. The tip should go into the cap 1-1/2". If not, trim the edges to fit.
2. Adjust height of bubble by pushing or pulling back on the Snout Saver. Mark holes on the poly tip over the metal edges. Use a vise to bend the poly if too stiff to bend by hand.
3. Drill 3/8" holes through the metal and the poly.
4. Bolt the bubble tip to the divider using the supplied 3/8" bolts.

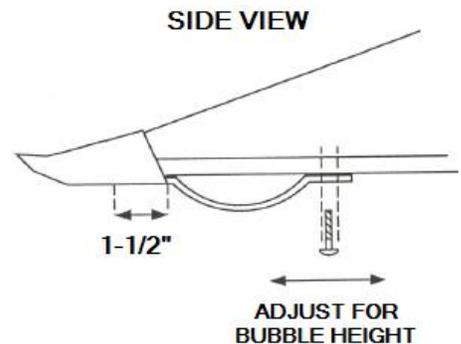

## BOTTOM VIEW

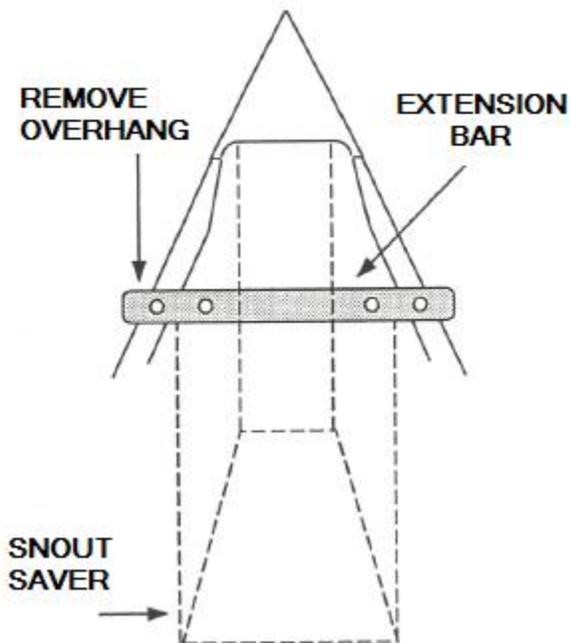

## FOR WIDE ROW SNOOT SAVERS.....

1. Adjust bubble height as shown above.
2. Slide Extension Bar between the Snout Saver and bottom of divider. Mark two (2) sets of holes in bar: an outside set to bolt the bar to the divider and an inside set to bolt the Snout Saver to the extension.
3. Drill 3/8" holes and bolt the divider, Snout Saver, and bar together with supplied bolts.
4. Cut bar edges down so it is flush with outside edge of the divider.



**MAY WES**  
*Original Poly People*  
A DIVISION OF PRIDE SOLUTIONS

120 Eastgate Drive SE  
PO Box 7  
Hutchinson, MN 55350

1-800-788-6483  
1-320-587-2322  
1-320-587-6112 (Fax)

[WWW.MAYWES.COM](http://WWW.MAYWES.COM)