

Instruction Guide

IH 2+2 Step & Handrail Left

(PN: Step-3331 / Handrail-3326)


1. Remove the original step (and the light shroud on the 88 series tractor.)

NOTE: A section of the light shroud must be cut off as shown below. Then flatten tin strip under the door.

2. Fasten the **mounting bracket** to the side of the tractor cab with two 3/8" x 1 1/2" carriage bolts and flange nuts. Use the original bolts in the bottom and rear holes.

3. Insert the **pivot arm** of the **top step section** into the **mounting bracket** and fasten with two 5/8" x 4" capscrews and flange nuts.

4. Fasten the **bottom step section** along the outside of the **top step section** using four 3/8" x 3/4" carriage bolts and flange nuts.

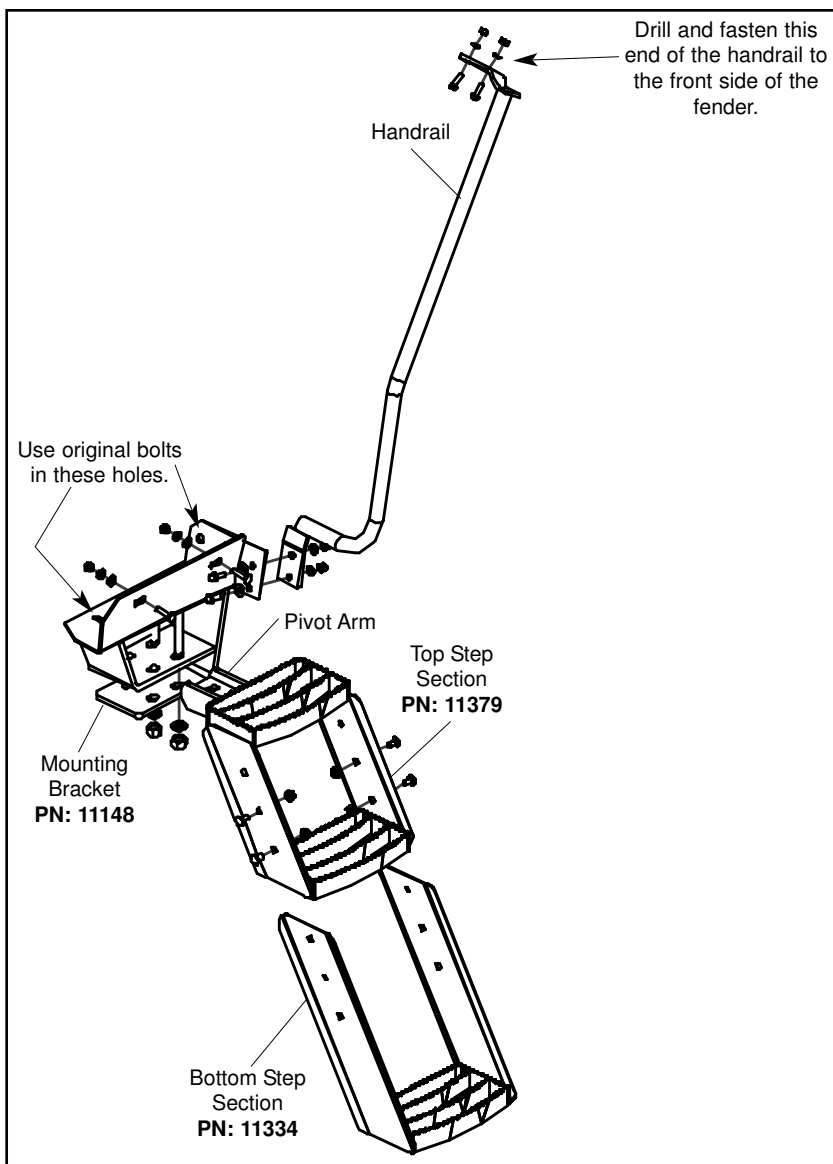

5. Fasten the lower end of the **handrail** to the rear side of the **mounting bracket** with two 3/8" x 1" bolts and flange nuts.
6. Clamp the upper end of the **handrail** to the front side of the fender and drill two 5/16" holes. Fasten with two 5/16" x 1" bolts and flange nuts.

