


Installation Guide

JD 30 Series Monitor Bracket (PN: 3173)

Fits:
John Deere 7020, 7030, 8030, 8030T,
9000T, 9020 and 9030 4WD Series

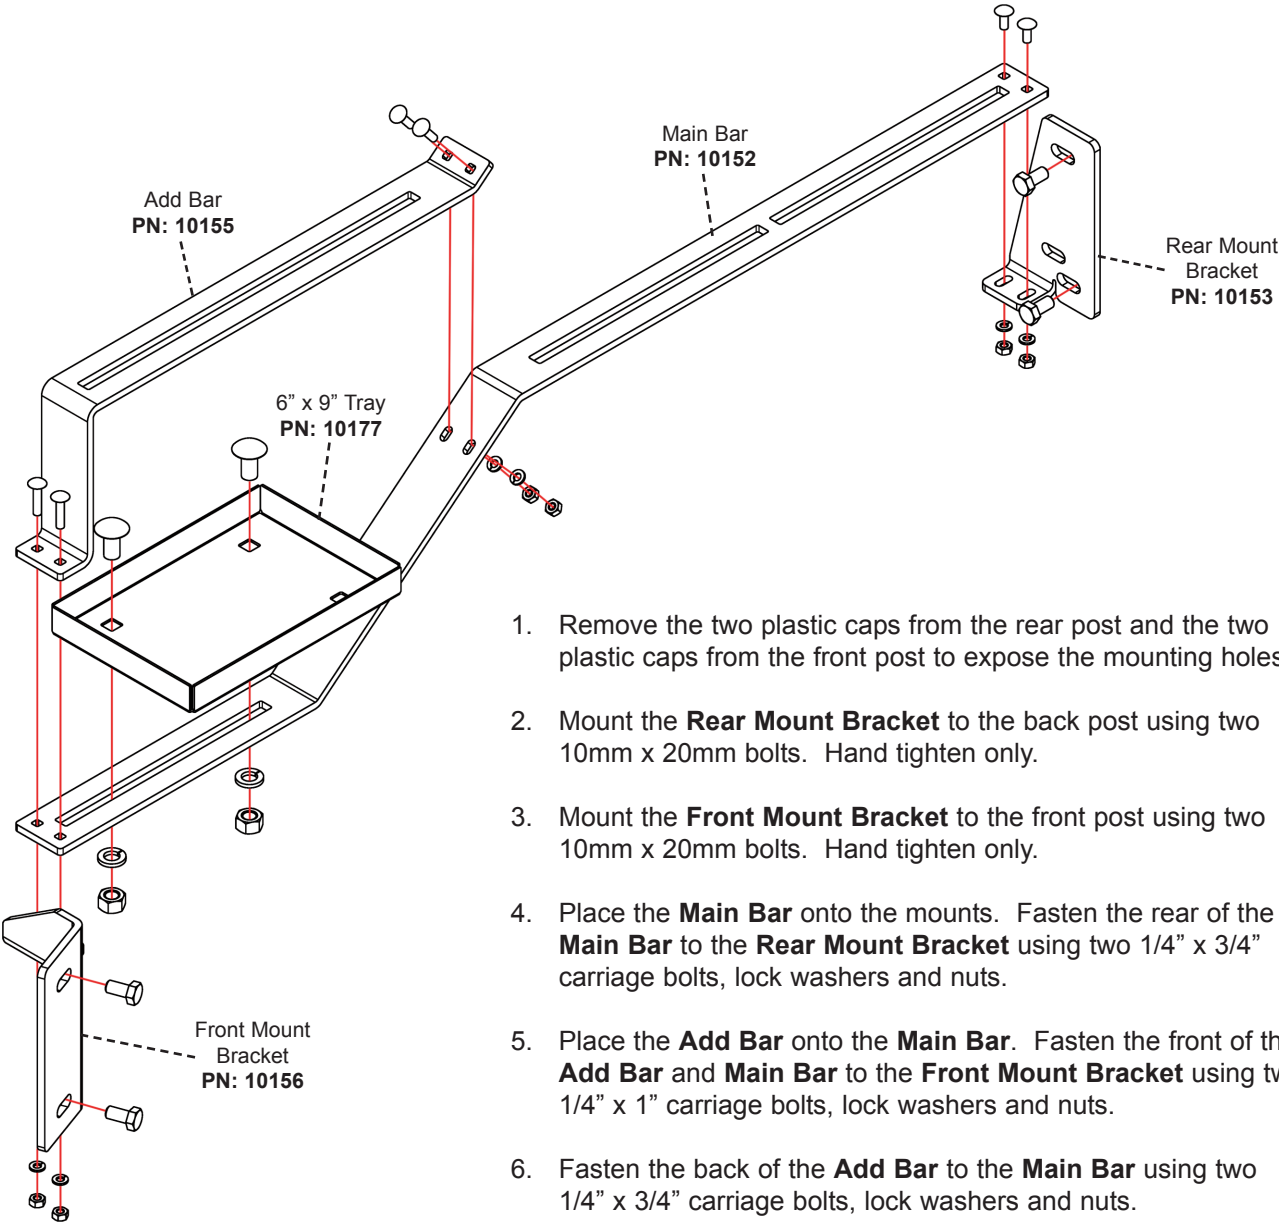

1. Remove the two plastic caps from the rear post and the two plastic caps from the front post to expose the mounting holes.
2. Mount the **Rear Mount Bracket** to the back post using two 10mm x 20mm bolts. Hand tighten only.
3. Mount the **Front Mount Bracket** to the front post using two 10mm x 20mm bolts. Hand tighten only.
4. Place the **Main Bar** onto the mounts. Fasten the rear of the **Main Bar** to the **Rear Mount Bracket** using two 1/4" x 3/4" carriage bolts, lock washers and nuts.
5. Place the **Add Bar** onto the **Main Bar**. Fasten the front of the **Add Bar** and **Main Bar** to the **Front Mount Bracket** using two 1/4" x 1" carriage bolts, lock washers and nuts.
6. Fasten the back of the **Add Bar** to the **Main Bar** using two 1/4" x 3/4" carriage bolts, lock washers and nuts.
7. Mount the **Tray** to the **Main Bar** at desired location using two 1/2" x 1" carriage bolts, lock washers and nuts.
8. Tighten all hardware.