


**Fits:**

**John Deere 7000R,  
8000R, 8000RT,  
9000R 4WD and 9000RT Series  
with 10 inch monitor**

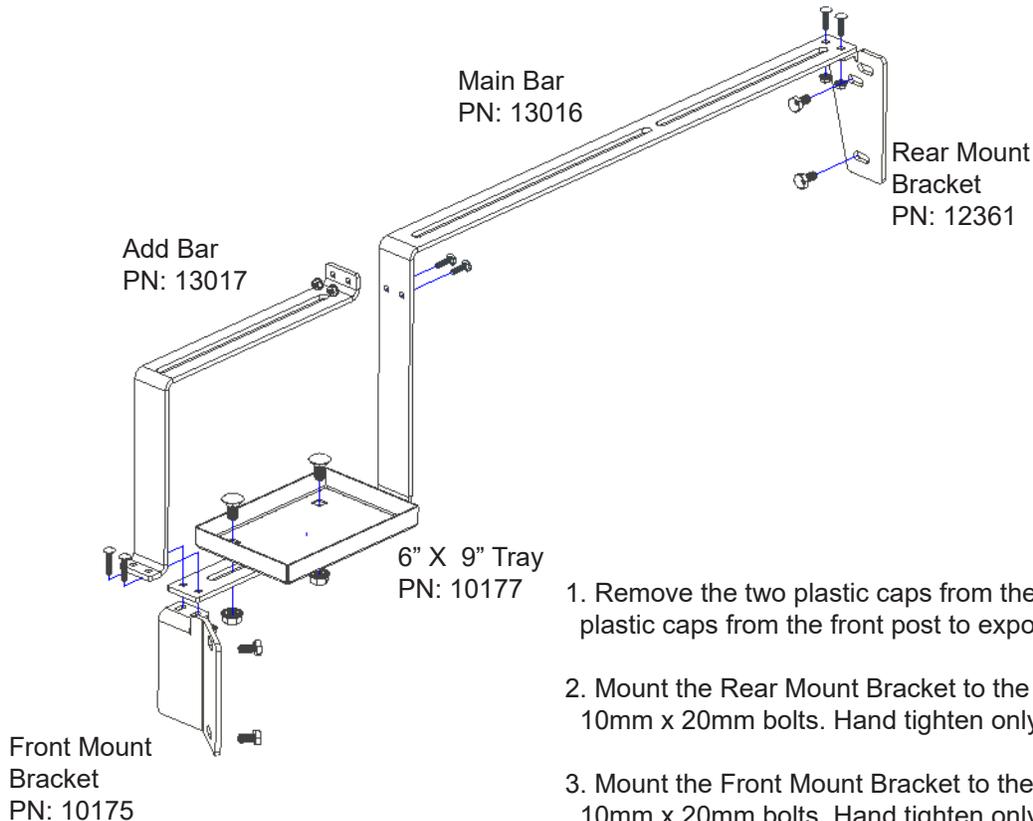

1. Remove the two plastic caps from the rear post and the two plastic caps from the front post to expose the mounting holes.
2. Mount the Rear Mount Bracket to the back post using two 10mm x 20mm bolts. Hand tighten only.
3. Mount the Front Mount Bracket to the front post using two 10mm x 20mm bolts. Hand tighten only.
4. Place the Main Bar onto the mounts. Fasten the rear of the Main Bar to the Rear Mount Bracket using two 1/4" x 3/4" carriage bolts, lock washers and nuts.
5. Place the Add Bar onto the Main Bar. Fasten the front of the Add Bar and Main Bar to the Front Mount Bracket using two 1/4" x 1" carriage bolts, lock washers and nuts.
6. Fasten the back of the Add Bar to the Main Bar using two 1/4" x 3/4" carriage bolts, lock washers and nuts.
7. Mount the Tray to the Main Bar at desired location using two 1/2" x 1" carriage bolts, lock washers and nuts.
8. Tighten all hardware.