




UNIVERSAL TRACTOR SUNSHADE BTB-2 AXLE MOUNT


Assemble Axle Mount Bracket

NOTE: Adapters not used with square axles.

1. Position bracket channels (A) (with adapters (B) for round and hexagonal axles only) around axle at approximate desired distance from tractor centerline. Install with 11 in. bolts (C), lock washers and nuts.
2. Install wing clamp (D) to support tube (E) with 2-1/4 in. carriage bolt, lock washer and nut, and install assembly onto wing clamp bracket (F). Swivel support tubes to obtain 38" to 42" centers. Support tubes may be cut if too long for application.
3. Install support rod (G) loosely to mounting channel with 1-1/4 in. bolt, lock washer and nut.
4. Install support rod to support tube with 2-1/2 carriage bolt through rod clamp (H) and tube clamp (I). Tighten rod hardware at clamp and at bracket channel.
5. Repeat steps 1-4 on other side of axle.
6. Insert sunshade assembly into support tubes, and fasten each with 2-1/4 in. carriage bolt (J) through clamp, lock washer and nut. Dimple on clamp must be in slot at top of tube.

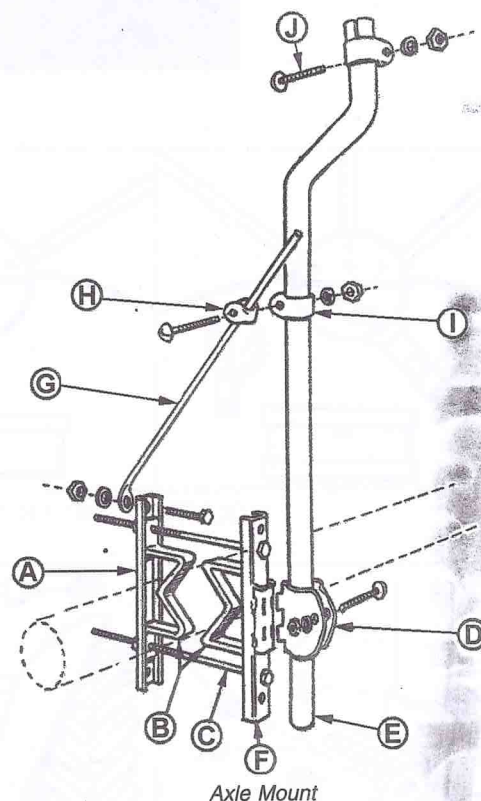

- A—Bracket Channel
- B—Adapters
- C—11 in. Bolt
- D—Wing Clamp
- E—Support Tube
- F—Wing Clamp Bracket
- G—Support Rod
- H—Rod Clamp
- I—Tube Clamp
- J—2-1/4 in. Carriage Bolt

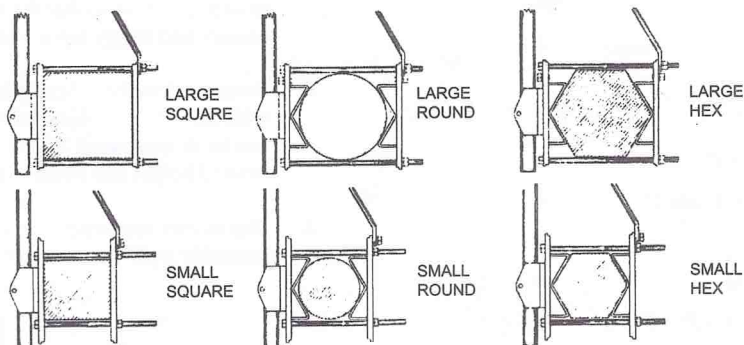

1132 West 1st
McPherson, KS 67461
Phone 620-241-3513
Fax 620-241-3532
Toll Free 1-800-677-089