


IH Combine Mud Scraper

Fits:

IH 14, 16, 21 & 23 Series Combines

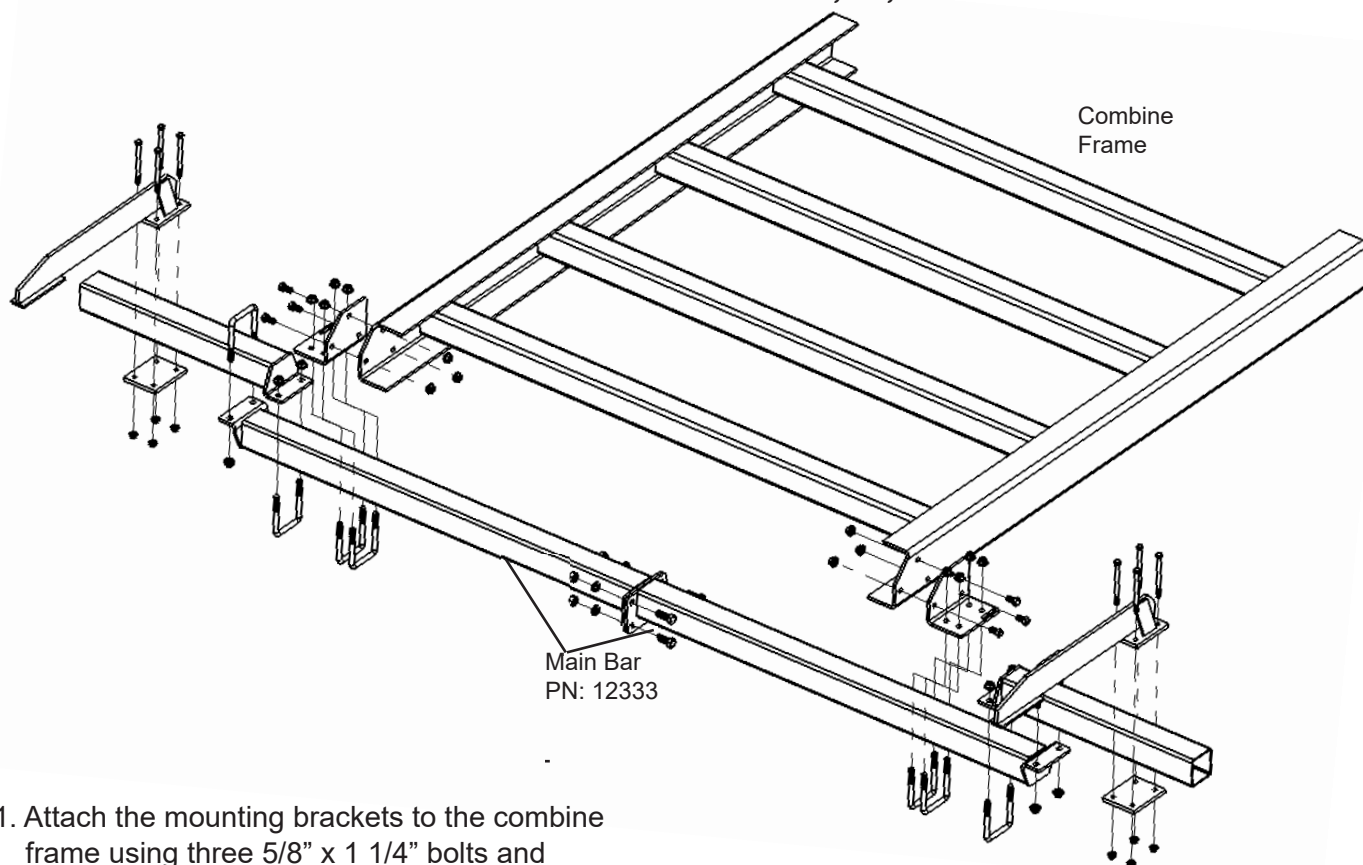

1. Attach the mounting brackets to the combine frame using three 5/8" x 1 1/4" bolts and flange nuts on each bracket.
2. Bolt the two sections of the Main Bar together with four 3/4-10 X 2 bolts lock washers and nuts.
3. Attach the main bar to the mounting brackets. Fasten with four 5/8" x 4" u-bolts and flange nuts.
4. Attach the extension bars to each end of the main bar. Fasten with two 5/8" x 4" u-bolts and flange nuts on each end.
5. Attach the stingers to the extension bars. Fasten each stinger using the stinger backup plate, four 1/2" x 6" bolts and flange nuts.

