


Kolpin UTV Rear Mirror - Universal

Product Installation Instructions | Part No: 98310

Please read and understand these instructions completely before installation to avoid injury to yourself or damage to the vehicle or accessory


Parts List:

ITEM	PART NAME	SPARE P/N	DESCRIPTION	QTY.
1	MIRROR	N/A	KOLPIN UTV MIRROR	1
2	1.75 OD CLAMP	KOL0365	PLASTIC CLAMP FOR 1.75" OD TUBING	1
3	BALL STUD	N/A	BALL STUD, M6 x 1 x 23mm	1
4	SCREW	N/A	M3 - 0.5 x 14mm PHILLIPS HEAD SCREW	2
5	WASHER	N/A	M6 FLAT WASHER	2
6	WASHER	N/A	M6 LOCK WASHER	1
7	NUT	N/A	M3 x .5 HEX NUT	2
8	NUT	N/A	M6 x 1 HEX NUT	1
9	1.50 OD CLAMP	KOL0362	PLASTIC CLAMP FOR 1.50" OD TUBING	1
10	2.0 OD CLAMP	KOL0366	PLASTIC CLAMP FOR 2.0" OD TUBING	1
11	FLAT SHIM	N/A	FLAT RUBBER SHIM	1

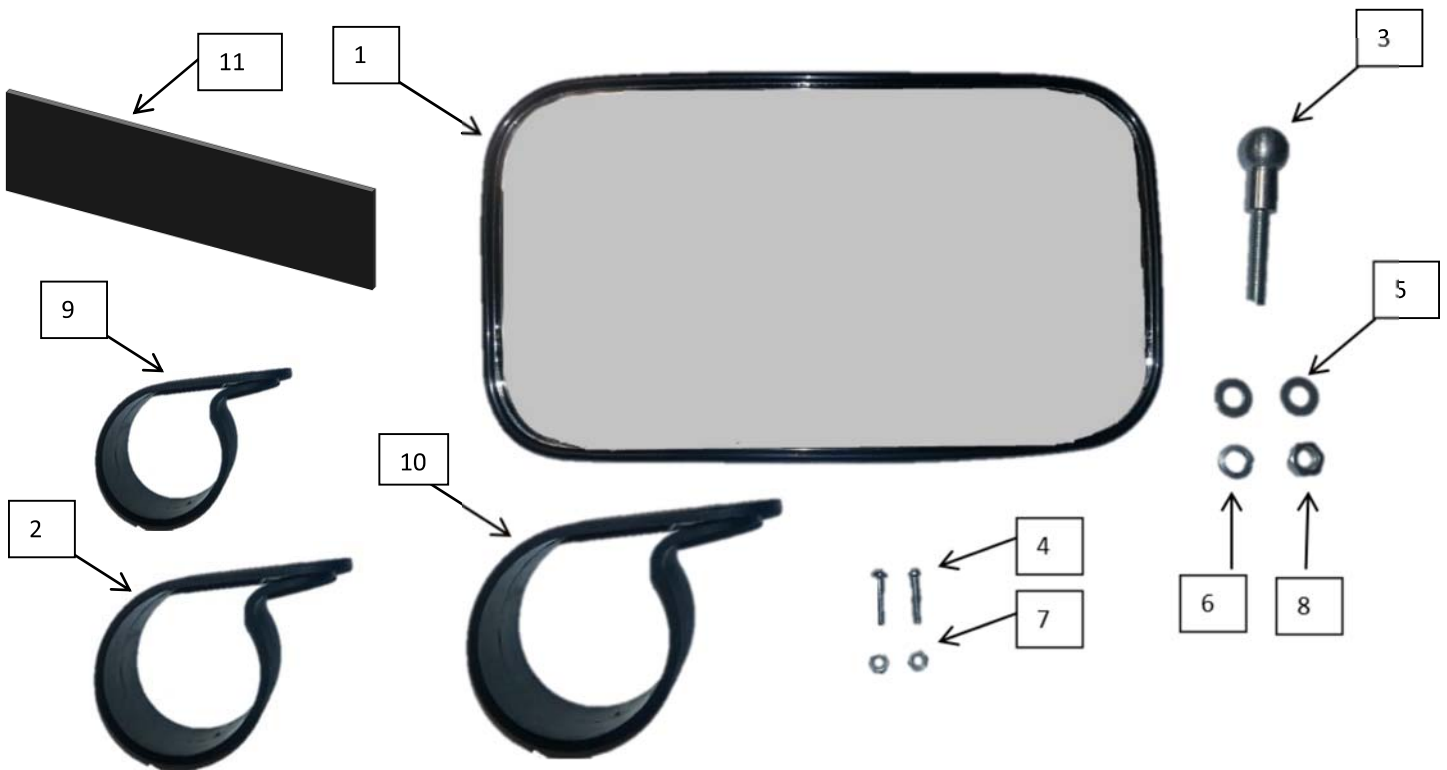

Install Preparation:

1. For **2.0"**, **1.75"** and **1.50"** OD tube size mounting applications, use the respective size plastic clamp (item 10 or item 2 or item 9).
2. For **1-7/8"** OD tube size mounting applications, use 2.0" clamp (item 10) with flat shim (item 11). The flat shim will be inserted between the clamp and vehicle tube.
3. For **1-5/8"** OD tube size mounting applications, use 1.75" clamp (item 2) with flat shim (item 11). The flat shim will be inserted between the clamp and vehicle tube. The flat shim will need to be trimmed to fit. Cut 3/8" of material from end of shim as shown. (See Illustration 1-1a).
4. For **1-3/8"** OD tube size mounting applications, use 1.50" clamp (item 9) with flat shim (item 11). The flat shim will be inserted between the clamp and vehicle tube. The flat shim will need to be trimmed to fit. Cut 1.0" (b) of material from end of shim as shown. (See Illustration 1-1b).

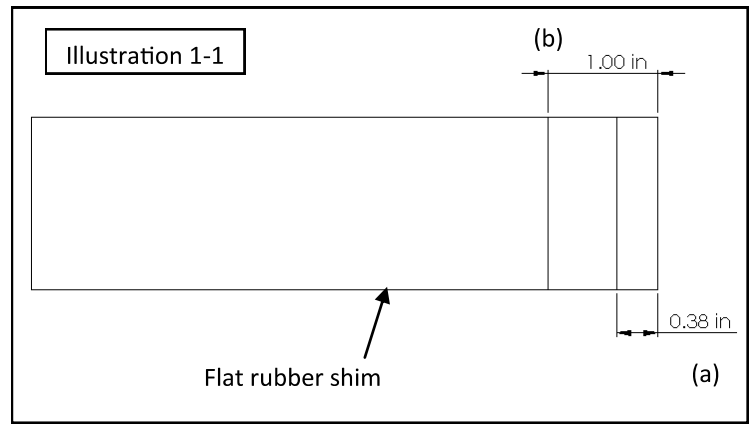

Mirror Mounting:

1. Place plastic P-clamp around vehicle tube in desired location. Secure mirror using M6 flat washers (item 5), M6 lock washer (item 6) and M6 nut (item 8) as shown below.

WARNING: Do not over tighten hardware or damage can occur.

For additional assistance, please contact Kolpin customer service department at (877) 956-5746 or (763) 478-5800 or email customerservice@kolpin.com

