

A-JDFRI00 FOOTREST



www.aiproducts.com

INSTALLATION / OPERATION MANUAL

INTRODUCTION

IMPORTANT: Read through this instruction manual thoroughly and familiarize yourself with the machine before performing any procedures.

This A&I Products footrest kit is designed to fit John Deere Combines, Cotton Pickers, Forage Harvesters, & Windrowers.

Average installation time:

Average installation time for all models is approximately 15 - 20 min.

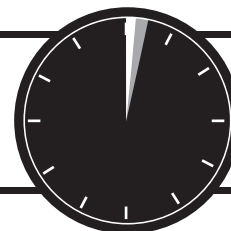


TABLE OF CONTENTS

Kit Components & Hardware	3
Safety Information	4
Installation	5

KIT COMPONENTS

Use this chart to confirm individual component quantities for A-JDFR100



COMPONENT

Footrest



Spacer Plate



1/4" X 1/2"
Hardware



Recognize Safety Information

This is a safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating procedures.



Understand Signal Words

A signal word - **DANGER**, **WARNING**, or **CAUTION** - is used with the safety alert symbol. **DANGER** identifies the most serious of hazards.

DANGER or **WARNING** signs are located near specific hazards. General precautions are listed on **CAUTION** safety signs.



DANGER



WARNING



CAUTION

Follow Safety Instructions

Carefully read all safety messages in this manual and in the equipment's operators manuals for any instructions and safety messages. Do not let anyone install or use without proper instruction.



Park Machine Safely & Prepare Machine for Service

Before working on the machine:

- Stop engine & remove key
- Hang "DO NOT OPERATE" tag in cab
- Ensure the cab is clean near the steering column and windshield

INSTALLATION PROCEDURE



A) Getting started

1. Locate seam in factory floor mat in front of the steering column.
2. Pull back floor mat to provide access to steering column bolts.
3. Some applications will have a significant difference in height between the steering column mount and the floor. In these applications the included spacer plate must be used. When this is needed, install the spacer to the bottom of footrest using the forward set of holes, matching the curved edge of both pieces. Use the included (2) 1/4" x 1/2" bolts. Bolt from the top into the tapped holes of the spacer. If the spacer is not needed, disregard this step.



B) Attaching the footrest to the steering column

4. Remove the two steering column mounting nuts (or bolts) on the front side of the column. These will be reused to install the footrest.
5. Install the footrest onto the studs (or align with holes). The curved edge at the base of the mount will face the windshield, the “U” side will wrap the steering column.
6. Reinstall the nuts (or bolts) previously removed. Ensure the hardware is tightened sufficiently.



C) Finishing installation

7. Restore floor mats back to original location. Trim to fit, if desired.



These instructions cover complete installation of A-JDFR100

Parts are not original equipment and not sponsored, affiliated, or otherwise connected with any brand.

